
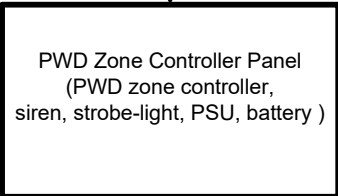




Typical System Wiring Example: 8 Zone PWD Call System with Contact Mirroring

Fire & Command Centre



230VAC / 1A







Relay Trigger Out

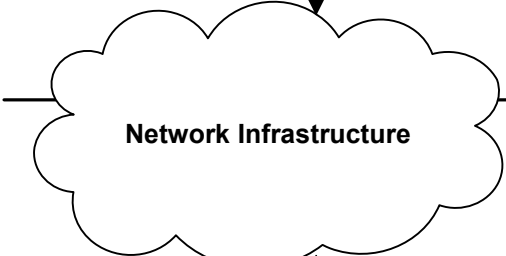


Guard Post

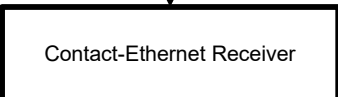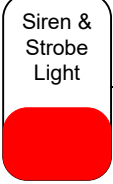


230VAC / 1A

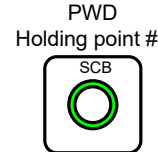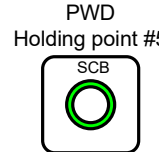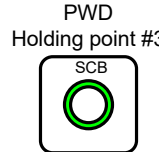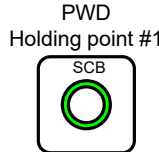


comBUS,
2 twisted pairs,
AWG20, fire
retardant

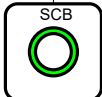


PWD Holding point #2

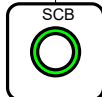

PWD Holding point #4

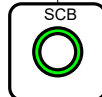

PWD Holding point #6

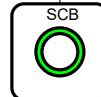

PWD Holding point #8

Looped-wiring, up to 1000m